


Bitvision Event Notifications


Quick Guide v2020

First please check the recorder settings.

From the XVR/NVR Main Menu > Configuration > Network > P2P - Enable P2P and status is "online"




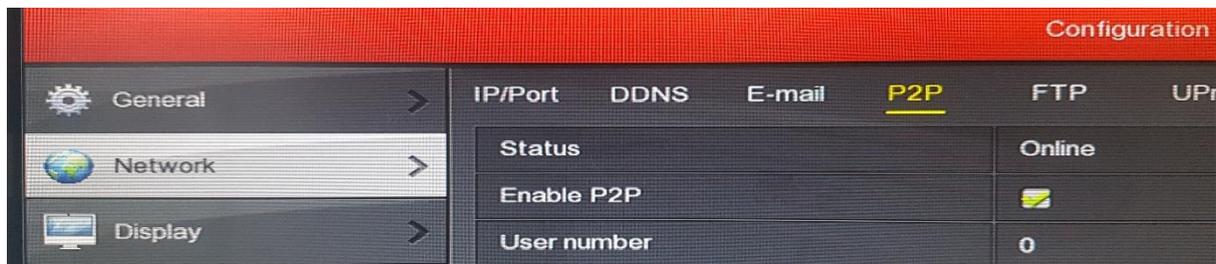


From the XVR/NVR Main Menu > Camera > Motion – Enable Detection and check the schedule ie All Week 00:00 – 24:00 (tick the box)

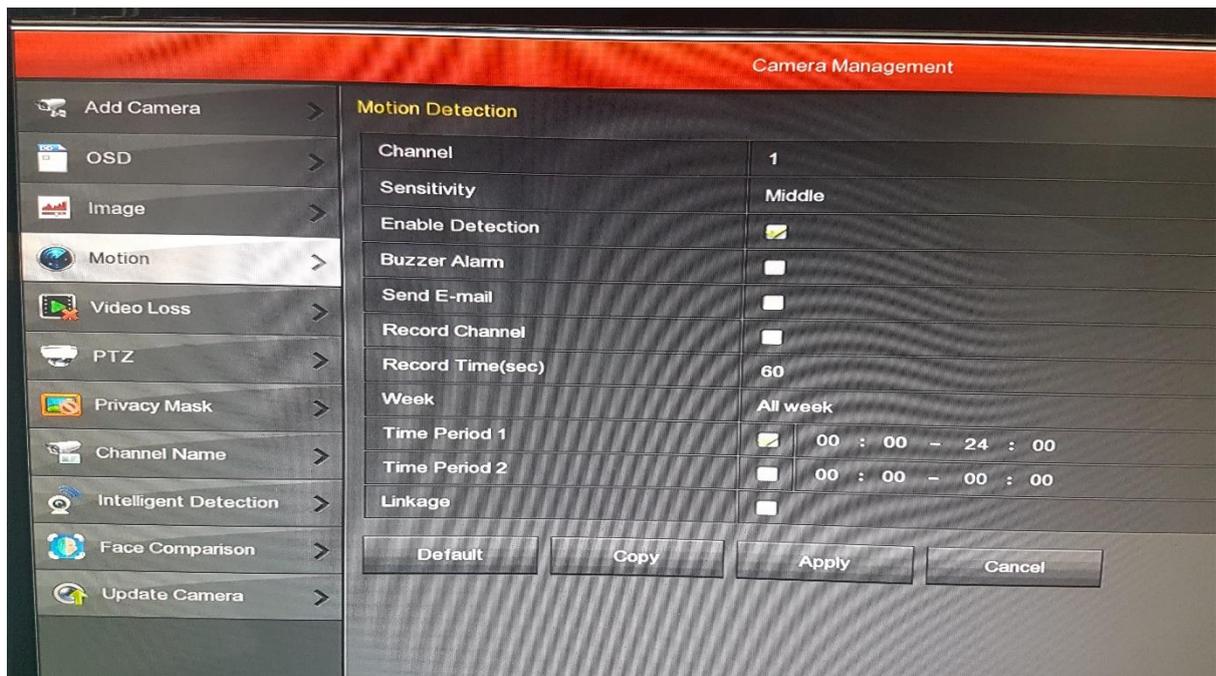


Open the Bitvision Application (This guide is based on Version 9.1.44.2)

Go to “Device” then select the 3 dots to the right of your XVR/NVR. Scroll to bottom of new screen and enable “Push Image”. Select “Channel Setting” and enable “Alarm Switch”

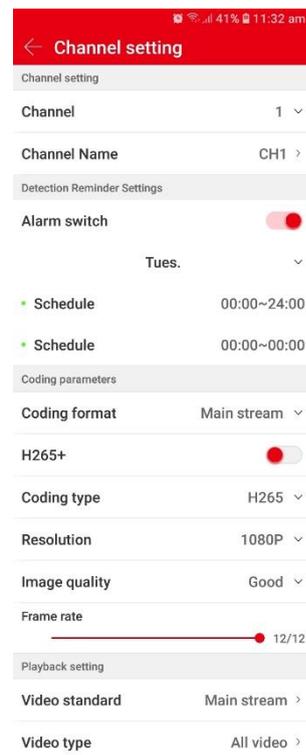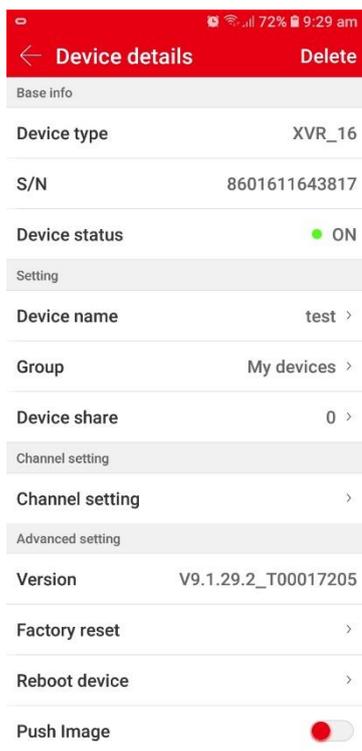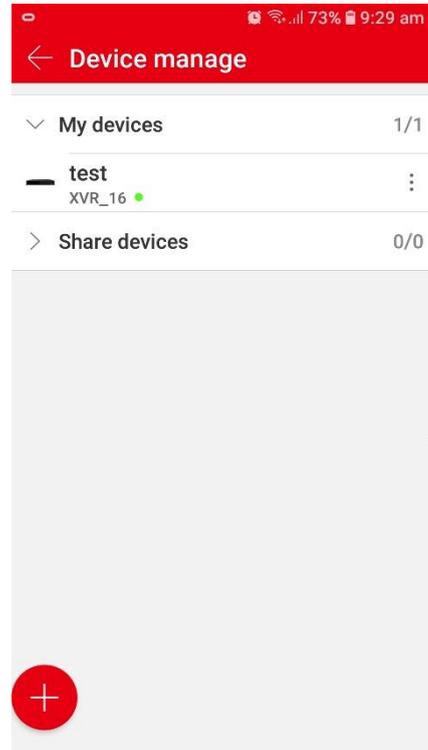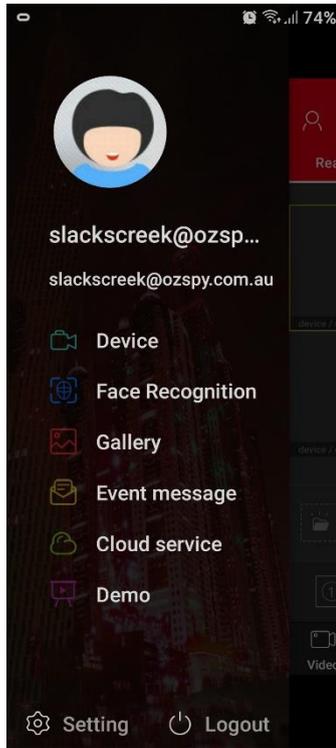

Return to menu and select “Setting”. Enable “Event Message” and “Traffic Alert”. Check “Event Message” for snapshot notifications.

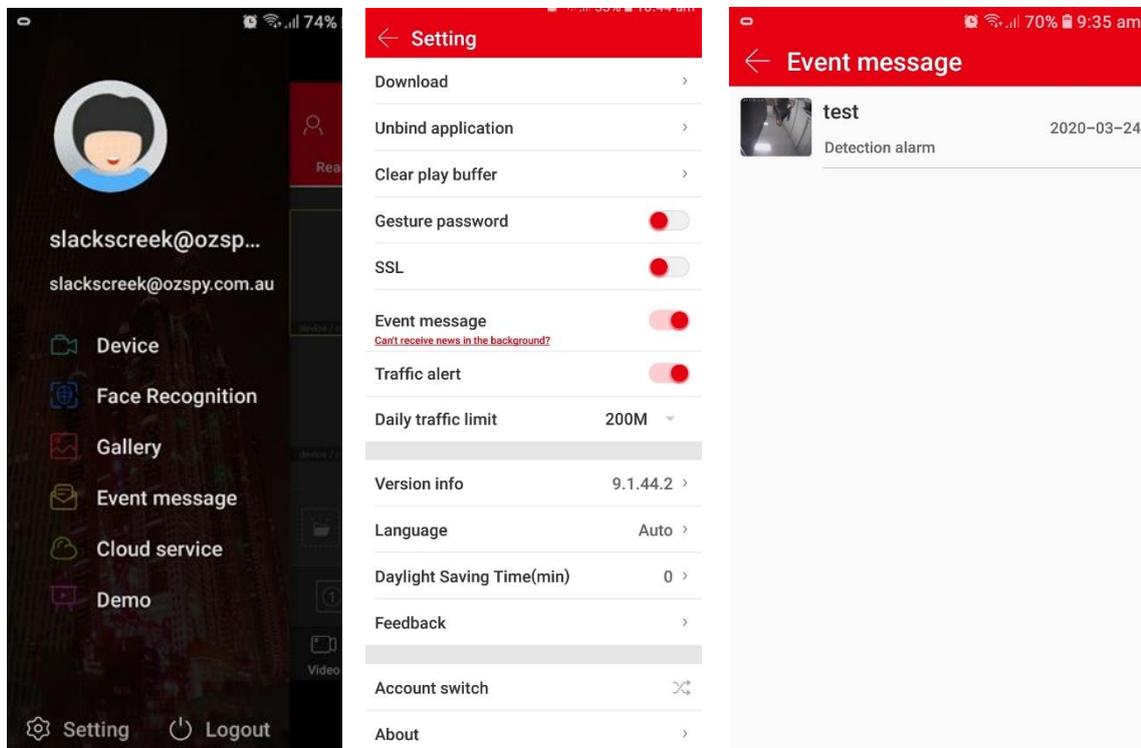

For additional information, manuals, video guides or assistance please visit:

www.ozspysupport.com

Important Notice: All jurisdictions have specific laws and regulations relating to the use of cameras and voice recorders. Before using any camera and/or voice recorder for any purpose it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and voice recorders, and to comply with the applicable laws and regulations.