



4 Ch OzSpy CCTV Digital Video Recorder DVR (PNSDVR404A)







Client Software User Manual

The Introduction

System Requirements: Windows 2000 and above CPU – above Pentium 4 2.4G Memory - over 512MB Monitor: support 1024*768 and the higher resolution Card: support direct draw to accelerate and opening

Software and Login

Double-click the shortcut or the TLClient.exe star to run the software, the Register Super User box will show the below image.

User Name:		
PassWord:		
Confirm		

Enter the user name, password and confirm the password. Your password should have a minimum of six characters.

After successful Registration, the dialog windows for you to login will pop up. Choose the username, enter the password then click Ok to enter the program. Or you can tick the box for "Auto Log On," so it will not appear on the window next time.







Introduction of the Software interface

	DVRClient							$\rightarrow 1$
	Preview	Play Back	Set	Log	 	1		→2
							Device Group	
								→3
							PtzTrack PicAdjust Cruse PtzCtil PreSet	
								→5
Time Info						3		
	т	îme -			Info			
								├─> ′∕

1: System and the button bar

Interface can be locked, minimize the window to the taskbar, close program operation.

2: Tab bar

Preview: Real-time preview on the device

Playback: Local video playback and remote playback

Configuration: Device Management, Remote Device configuration, Local

parameters, setting Remote and Local video playback

Log: Local and Remote

Inquiry Map: Electronic Map

3. Device Tree

Shows all equipments/devices, to manage device or group

4. Preview Display Window

Real-time preview of the device channel





5. PTZ Control window

For the configuration of the Pan / Tilt / Zoom feature

6. Preview Control Bar

Controls to play, pause, fast forward, rewind the video, switching screen modes, full screen, rotation, etc.

7. Alarm information list

Displays short messages and other alerts

Equipment Management

Before using the software, you need to add and configure the device operation. Click the tab bar "Set/Configure" to enter configuration mode.

Click on the left navigation bar "Device Manager" to enter the device management interface.



Interface Description

- 1: Navigation bar
- 2: Device tree
- 3: Packet Group control
- 4: Group Tree





Device Tree configuration

Add Area - In the initial run, the device tree list defaults to an empty tree, rightclick any blank space to Add a region/area.

Device	
	Add Area
Add Area	Set Area Name
Add Child Area Modify Area	Area Name
Add Device Modify Device Delete Device	Main Area
Delete Area Find Device	OK Cancel

Fill in the name of the regional/Area name and click OK. You can also add the "Main Area" but since this is the first area and there is no one higher, just leave the "Main Area" blank.

You may right click the recently added area to "Add Child Area" or "Modify Area" Select "Delete Area" if you want to remote an area.

Note: If you select "Delete Area" the delete operation will not only delete the selected area, but will remove all of the sub-area or child-area under it; if the area is currently under the Preview channel, you will see a warning message.





Add Device - Right-click the Area, select "Add Device"

ESee-Net		Tradition Me	00
ESoo-Not ID		Device	192.168.1.61
LSeenet ID	<u>.</u>	Device Port	8675
Device Name	dvr 4	ू गर- -	
JserName Jser Pass w ord	admin		
n Area	1		

Options	Specifications
ESee_ net	it can be linked via setting ID of ESee_ net
Traditional	only IP address of DVR can be available
Device address	IP of equipment or domain address
Device port	port number
Device name	user-defined
Access number	according the fact
Name	registered name
Password	password of user
Area	area of user

Fill in the username and password and click Ok. Then continue to add other devices.





Search the LAN-line equipment

In any regional / sub-regional node, click the menu item in the "Find Device" or "Search Equipment", to search for the LAN-line device.

Index	Device Name	Device IP	Device Port	Device Model	Max Chn Nu	
L	NetDVR	192.168.1.136	8671	R9216	16	
						Add Devic





Group Tree Configuration

If the group did not contain any node in the tree, right click at the grouping column and select "Add Group" item

Group	
	SetGroupName
	GroupName
Add Group Modify Group	
Delete Group	

Enter a group name, click OK to add group.

You can access the list from the "Device Tree" node on the left and add it the "Group Tree" on the right. Use the "Left", "Right" "Move" and "Down" arrow buttons to adjust the order of nodes.

In the Group tree it will show this format "device name _ channel name"

DVRClient		
Preview Play Back	Set Log	
Device Manage	Device	Group
Client Setting	- " CH4 - " CH5 - " CH6 - " CH7 - " CH8 - " CH9 - " CH10 - " CH11	→ H264 DVR_CH5 → H264 DVR_CH6 → H264 DVR_CH7 → H264 DVR_CH7 → H264 DVR_CH8
User Manage	- " CH12 - " CH13 - " CH14 - " CH14	
	CH16	





Image Preview

Non-Robin Prev	lew
DUD OL:	

DVRClient				
Preview Play Back	Set Log		_	
				Device Group
				CH2
				CH4
				— 🖉 СН13
				PtzTrack PicAdjust Cruise
				PtzCtrl PreSet
				⊼ ↑ ⊼ <u>↑</u> ∰
				♦ ♥ ♦ ♥
				K ← X □ •2
		× • • •		
Time		I	nfo	

Double-click Preview

Select a channel from the left, the window frame is selected at this time will become light blue. Double-click the device list or group list, the channel will be broadcasted in this window.

Drag to preview

Drag the device list or group list to display the live feed on screen.

Close the preview

Right-click the Preview, the menu appears, click on "Stop Preview" or click the preview control bar of the "stop" button.

Start /Close all preview

Select a device name and right click to choose "open all device channel" to open all channels, and choose "close all device channel" to close all.





Preview Control

Stop: Stop the currently selected window preview.

Video: Click the video button to start the currently selected client video playback window, click again to stop recording.

Drawings: Save the currently selected window screen shot

Sound Control

Right click in the player window, select "open voice" to open the window of the audio preview. Right click and choose "turn off the sound" to close the preview.

Other features

Double-click to enlarge: In the multi-screen mode, double-clicking the playback window will enlarge the window, double-click again to return. Screen mode: multi-screen mode can be switched. Full Screen: maximize the player window panel.

PTZ control

Control the direction of head rotation, speed, aperture, focus, focus. As well as lighting, wipers and other auxiliary functions.

• Locus

Setting and control PTZ locus Pre-set locations Set PTZ preset point

• Cruise

Set point head cruise, cruise path.

• Screen adjustment

Set the screen brightness, contrast, color, saturation.





View and Record Live Cameras

- Once connected, you can view all four camera feeds from the "Preview" tab and also perform other functions.
- While watching a live feed on screen, press the "Record" button to start recording to your computer's HDD. You may go to the "Set" tab and select the folder location where the footage will be save when the "Record" button is pressed.

Local Setting	Record Setting	Warning Linkage	
- Local Record Setting			
Circulation Record			
Start Driver	c:\ 🖌	End Driver	C:\
Max File Size	32M		Save

Playback of Recordings on the DVR

- Click the tab for "Playback" to enter the playback interface.
- Select the camera (s) you would like to view, as well as the date and time to restrict the search to.
- Press the "Search" button. The search results will be displayed in the log window
- From there you can double click an item to load it into the main window and use the transport controls to play, pause, fast forward and rewind the video.

DVRClier	it						
Preview	Play Back	Set	Log Local Play B	ack			E-C TEST
		I II IÞ X			4		7
Device Name	e	Index Channel	Start Tim	e E	nd Time	File Size	
	2 3 4 6 7 8						File Type All
■9 ■ ■13 ■	10 ■11 ■12 14 ■15 ■16						Start Time 2010-08-30 00:00:00 M
							End 11mm 2010-08-30 18:10:13
	menay	0/0 H-	0	GO @ RayFila	F	attannist	Searon





	• •	⊪ ×		() ······	m 🗖
	Index	Channel	Start Time	End Time	File Size
Device Name H264 DVR	1	01	2010-08-31 16:27:44	2010-08-31 16:28:00	632 KB
	2	01	2010-08-31 16:27:44	2010-08-31 16:28:00	616 KB
	4 3	01	2010-08-31 16:27:44	2010-08-31 16:28:00	616 KB
5 6 7 1	B 4	01	2010-08-31 16:27:44	2010-08-31 16:28:00	614 KB
	ě.		i i i i i i i i i i i i i i i i i i i		
	<u> </u>	8	ii ii		i
2	-		2		
TimePlay	1/1	₩ +	→ → 1 GO @) PlayFile 🛃	File Download

Remote video file retrieval

On the Device tree on the right, select the camera needed, then on the search panel below select the channel to search, select the type and start time of the recording, click "File Search".

Remote file download

Select the file in the search results, on the right click on "File Download", you can start downloading files, and the download progress bar will appear below.

Server Configuration

Go to the "Set" tab then "Server Setting" to enter the server configuration page. After making changes on the page click OK to apply the new parameters.

DVRClient		ê _ ×
Preview Play Back	Set Log	
	ServerInfo ChannelInfo AlarmInfo UserInfo RecordInfo) VideoInfo Other 🛛 🕀 💎 TEST
.CP	- Device Info	
Device Manage	DeviceName	
	DeviceModel	
Server Setting	Mac Addr	
	System Info	
	DiskPull No State Display	
Client Setting	Lock Time Never Kesolution	<u> </u>
	Auto Switch Never 🗹 Standard 🛛	PAL 🔽
User Manage	Transparency Opaque 🔄 Language 🛛	Chinese
	Network Info	
	DHCP	
	Device Port 0 HTTP Port	0
	IP Addr	
	NetMask	
	Gateway DDNS Addr	
	PPPoE User DDNS Service 33322	
	PPPoE Password DDNS Domain	
	DDNS User DDNS Password	
		OK Cancel





SOLUTIONS

System Configuration Information

ServerInfo Chann	elInfo AlarmInfo) UserInfo Recor	dInfo VideoInfo	Other	
C Device Info		12			
DeviceName					
DeviceModel					
Mac Addr				8	
- System Info	#* X		94555		
DiskFull	No	State Display			
Lock Time	Never	Resolution	<u> </u>		
Auto Switch	Never	Standard	PAL		
Transparency	Opaque	🞽 Language	Chinese		
Network Info					
DHCP					
Device Port 0		HTTP Port	0		
IP Addr	a a a				
NetMask					
Gateway	at 12 at	DDNS Addr	· · ·		
PPPOE		DDNS			
PPPoE User		DDNS Service	322 🞽		
PPPoE Password		DDNS Domain			
DDNS User		DDNS Password			
		Î		ancel	

Channel Configuration Information

ServerInfo ChannelInfo	AlarmInfo	UserInfo Re	ecordInfo \	VideoInfo	Other
Channel Param ChnName Channel		01			
Image Param	nnelPos) 🗖 Sh	ow Time 📑	ïmePos 🗖] Overlay	Area
Record Param Bit Rate 64Kbps Quality Best	Steam Typ	e Video 25 fps	Bit T	уре С	BR
SubStream Param Bit Rate 64Kbps Quality Best	Steam Typ	e Video 25 fps	Bit T	ype C	BR M
PTZ Param Baudrate 115200 Check No DecoderAddr 0	Data Bit	8 No	Stop	o Bit 1 ocol P	elco-d
Copy To Other Channel -	3 🔹 04 1 🔹 12	■ 05 ■ 06 ■ 13 ■ 14	□ 07 □ 15	⁰⁸	All Yes/No
			ОК		ancel





Alarm Configuration Information

ServerInfo Channe	lInfo Al	armInfo	UserInfo	o Reco	rdInfo	VideoInfo	o Other
AlarmIn Info —— AlarmIn ID	01	• Туре	High	×		TreatAla	rm 🔳
- PTZ LinkAge			01	×			
EnableTrack							
 EnableCruise 		Cruise	PathNum				
 EnablePreset 		Prese	Point				
AlarmOut Info — AlarmOut ID	01	×	Туре	B ag	Nor	mal Open	
Email Addr							
							ļ
- Trigger AlarmOut		igger Info —					
	E	mail Alarm			Sound	Alarm	
					Deidy		
	annei 03	04	05	06	07	08	
09 🗖 10	11	12	13	14	🗖 15	🗖 16	All Tes/No
Copy To Other Cha	annel ——	5.00m]
01 02 09 10	03	04	D 05	□ 06 □ 14	07	0 8	All Yes/No
					c		
					0		Cancel

User Management Configuration

ServerInfo Chann	elInfo Al	armInfo	UserInfo	RecordInfo	VideoInfo	Other
UserInfo ——						
User ID	01		👱 User	Name		
Password			Cont	firm		
- Remote Right -						
Ptz Ctrl		Record		Play	Back 🗖	
SetParam		Log		Too		
Preview		Alarm		VOI	• 🗖	
Local Right —						
Ptz Ctrl		Record		Play	Back 🗖	
SetParam		Log		Too		
<u></u>)
Del User			F	ок	Cancel	





Video Deployment

ServerInfo ChannelInfo AlarmInfo	UserInfo	RecordInfo	VideoInfo	Other
Record Schedule Info				
RecordChannel 01 🞽	Day	Mon	~	
Mon	6			
12	18			
🚦 Timing 📃 Alarm 🚺	MD	Combine	ed Empty	8
				J
- Schedule	Timina	MD		Alarm
18:02				
18:02				
	-	_		-
	-	_		
Copy To Other Week				
Mon Tues Wednes	🗖 Thurs	🗖 Fri 🛛 🛙	Satur I	Sun
Copy To Other Channel				
01 02 03 04	05 0	06 07	08	1
0 9 1 0 1 1 1 2	1 3 1 3	14 🗖 15	1 16	
			_	
		OK	Ca	

Video Detection Configuration

ServerInfo Chan	nelInfo AlarmInf	o UserInfo	RecordInfo	VideoInfo	Other
└ VideoDetection Info		-11		-	î
Video Channel	01	~	Area	3	
Detection Type	MD	<u> </u>			
- Trigger AlarmOut -					
01 0 2	03 🗖]04			
C Trigger Info					
Email Alarm	🗖 🔹 Sound Alarm				
Delay	55 🖌	Sense	NoDe	etect 👱	
- Trigger Record Cha	nnel ———				
01 02	03 04	05 06	07 🗖		Yes Mo
09 🖬 10	11 12	13 14	15	116	Tes/NO
			r		
			ОК	Ca	ncel





Other Configuration

ServerInfo Chan	nelInfo AlarmInfo) UserInfo	RecordInfo	VideoInfo	Other
- Manual Record					
01 0	J02 🗖 03 🗖	04 05	06 🗖	07 🗖 08	
09	10 🗖 11 🗖	12 🗖 13	14	15 🗖 16	
	Set				
]
Disk Into -]
SATA_01					rmancy
SATA_02					rmancy
SATA_03	MOV MO				rmancy
SATA_04	OM /OM				rmancy
SATA_05	om /om				rmancy
SATA_06	/OM				rmancy
SATA_07	oM /oM				rmancy
SATA_08	OM /OM				rmancy
					J
- System Time			1	-	
2010-08-30 1	8:02:05 🞽 🗧	Refresh	Set		
<u></u>					
			r -		-
Clear	Alarm		Ке	start	
E Dest			L 10	data	
Fact	oryset		-Op		
<u> </u>					

THE CLIENT CONFIGURATION

Local Configuration

C Snap Plcture Setting	Loop Time[s]		5		
Enable Loop Snap Picture Setting	Loop Time[s]		5		
- Snap Picture Setting					
Snap JPEG Picture					
Path Setting					
Remote Download File Path	C:\	DownLoad			Browse
Save Snap Picture Path	C:\	PictureFile			Browse
Advanced Setting Warning Linkage					
Warning Sound Out					
Warning Time delay [s]					
Log Setting					
Save Warning Log Time	On	e Month		~	
Save Operator Log Time	On	e Month		~	
System Time	On	e Month		<u>~</u>	
Other Setting					
Automatic LogOn					j j





Video Configuration

Local Setting	Record Setting	Warning Linkage		
Local Record Setting Circulation Record Start Driver Max File Size	21\ 12M <u>×</u>	End Driver	C:\ 💆	
Set Record Planning		_		
⊡-₹ TEST	ſ	All Day Records	Start Time	End Time
		Time Section 1	00:00	00:00
		Time Section 2	00:00	00:00
		Time Section 3	00:00	00:00
		Time Section 4	00:00	Save

Note: After saving the Local Video configuration parameters, you need to restart the client software for the changes to take effect, and the plan is the premise of the video stream must have a preview.

Video save path

Set the starting end drive, set the video save path, set the file package size, the largest single file size limit.

Plan Video

Check "program video" to open the program video.

In the left side of the device tree, select the video channel to program, set the right time to the video, click Save.

Alarm Linkage

Client option set alarm linkage.





Log

DVRClient									B
Preview	Play Back	Set Log							
🗉 🚭 TEST		StartTime 2010-0	8-30 00:00:00	. 💌 e	indTime	2010-08-30 23	:59:59	~	
				Vlain Type			amineLog	Eau	ceLog
			Index	Oper /	Content	OperatorN	Area Name	ServerName	ChannelNa
			1 200						9

The Operation log

Query client operation log

Alarm log

Query client alarm log

System Log Check the client system log

Remote Log

Query remote device logs, select the device tree in the left list.