

# ASPYWATCH02



**Charge Device 4 – 5 Hours before first use!!!**

*Ensure you charge your device for at least 4-5 Hours Before use to maximize battery life*



Charge Device for 4 - 5 Hours

## **Setting up your device**

Charge device for 4-5 hours and set current time using the 'set time' knob on the right side of the watch.

### **Recording video**

- Hold ON/OFF button for 5 seconds, the indicator light will illuminate blue (colour may vary)
- Watch is now in standby mode
- Press ON/OFF button once, indicator light will flash three times and then turn off
- Camera is now recording video
- Press ON/OFF button twice quickly to stop the video recording
- Press the ON/OFF button again for 5 seconds to save the recording (This also turns the device off) red light will flash 3 times.


### **Taking photo**

- Hold ON/OFF button for 5 seconds, the indicator light will illuminate blue (colour may vary)
- Watch is now in standby mode
- Press PHOTO button once, indicator light will flash red (colour may vary) and then go back to standby mode
- A picture has now been captured and saved on your device

### **Setting Time & Date**

To set the time on your device, navigate to the devices root folder via My Computer. There will be a .txt file called 'Time.txt' open the file and edit the time to the current date/time as shown below.

If this file is not visible, you can simply create the file yourself by right clicking in the root folder and selecting >New>Text Document and entering the correct date/time, save the document with the name 'time'.

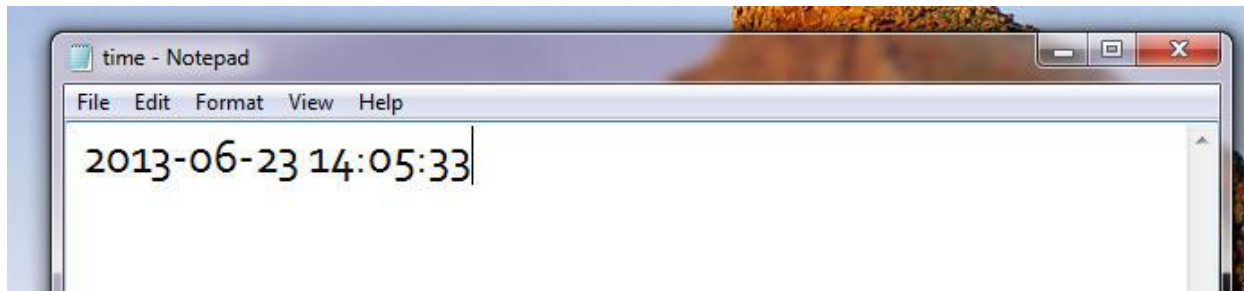

### **View and Download Footage**

When the device is plugged into your computer, an AutoPlay window will pop up. Click on the 'Open folder to view files' option to access your footage.

Click through the folders and there you will find your footage. You can drag and drop the files to a folder on your desktop or view the footage directly from the device.

### **Troubleshooting**

- When the storage capacity is full, the blue and red lights flash alternately for 5 seconds, then automatically saves the current files and shuts down. To continue to use this video recorder, copy the necessary files to computer and delete the old documents in storage in order to free up storage space; When the battery is low, the blue and red light flash alternately for about 5 seconds, that automatically saves the current files and shuts down. To continue to use the recorder, please charge the battery. If the video recorder stops responding due to improper operation or an unexpected reason, please press the mode button and operation buttons at the same time to reset the device.

If footage will not play correctly, please make sure your computers media player is up to date and the latest codec pack is installed.