


Body Worn Camera User Manual

CELBC15CAM

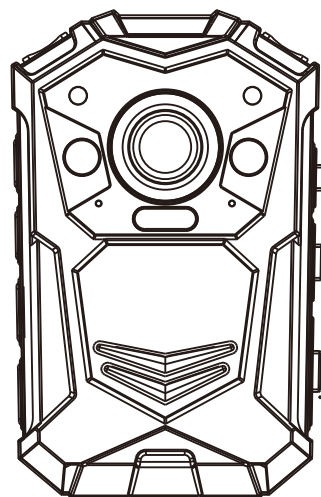


Body Worn Video and Audio Recorder

Appearance and Key Description



Display screen Description

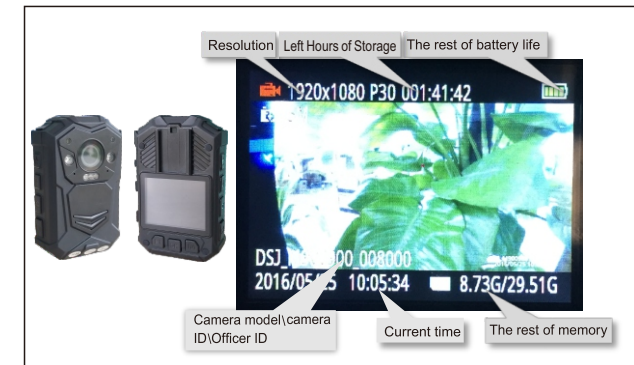

BASIC OPERATIONS

Power On / Off Key

Short press to return to previous screen.
Short press to enter / exit standby mode.
Press and hold 4 seconds to turn the camera on/off.

Audio Recording Key

Short press to start / stop audio recording.
Press and hold 4 seconds to start recording while camera is powered off.

Photo Taking Key

Short press to take photos when the camera is on standby.
Press and hold 4 seconds to enable LED flashlight.

Video Recording Key

Short press to start / stop video recording.
Press and hold 4 seconds to enable video recording while camera is powered off.

Playback Key

Short press to browse the last recorded video or audio or photo fles.

Infrared / LED Light Key

Short press to enable / disable IR red light.
Press and hold 4 seconds to enable / disable LED white light.

OK Confirm Key

Short press to access video, photo and audio folders.
Press and hold 4 seconds to enable / disable laser pointer.

Menu Key

Short press to access the camera's menu settings.
Short press to select a file when browsing.

Add★ On Important File Key

Short press to mark an important file.

Reset Key

Reboot the camera using a pin while pressing the reset key.

FUNCTIONS

Password Protection

When entering the setting menu or connect the camera to PC, a password is required. The initial password is 000000. The password can be changed in the **Change Password** setting option.

Adjusting Focus

Press and hold **[F]** or **[M]** key to adjust the focus.
(Note: focus cannot be adjusted under HD 2304*1296 video resolution)

Laser Pointer

Press and hold **[Q]** key 3 seconds to enable / disable Laser Pointer.

Changing Video Resolution

Press and hold **[R]** key for 3 seconds to switch between 848x480 P30 and 1080x720 P30 resolution.

Charging (Li-ion Rechargeable Battery)

Camera can be charged via USB connected to a computer or through multifunction base charging.
A full charge requires 4 hours and it is completed when the blue indicator light turns off.

Fast Forward / Fast Reverse

Press and hold **[F]** or **[M]** key to fast forward or fast reverse during playback.

Power Saving Mode

Screen will enter standby mode (LCD screen off)if the camera is inactive for too long.
This option can be enabled / disabled in the main menu settings.

Video Snapshot

Short press **[Q]** key to capture a photo during video recording.

Walkie-talkie

Short press **[T]** key to talk after connecting to a walkie-talkie.

ALARMS

Insufficient Battery Alarm

Indicates that the camera's battery life is running low and requires charging.

Storage Full Alarm

Indicates that the camera's memory is running low and requires backing up of the files to free up the memory.

PORTS

USB Port

Connect this port to a computer using a cable to access the files and charge the camera.

HDMI Port

Connect this port to a HD TV to playback the files.

AV Port

Connect this port to an external mini camera to record video.

INDICATOR LIGHT

Standby Indicator Light

Light turns green when camera power on.

Charge Indicator Light

Light turns blue when charging camera.
Light turns off when charging is completed.

Video Recording Indicator Light

Light turns red and flashing when recording video.

Audio Indicator Light

Light turns yellow and flashing when recording audio.

ATTENTION

Fully charge the camera before first time use.

Do not attempt to open / repair the camera by an unauthorized personnel.

Prevent the bottom of the camera from being wet when the camera being charged.

Full HD Video/Audio
Body Worn Camera

OzSpy Security Solutions
www.ozspy.com.au
1300 069 779