

OzSpy
HAEPEN720P
720p HD Pen cam



User Manual

Summary

This product is a digital pen with HD video recording. It can record High-quality audio & video and has the advantage of simple operation, small size, covert and portability.

Charging the Spy pen!!!

The battery is a built-in lithium rechargeable battery, so when you use it for the first time, please charge firstly for a minimum of 4 hours by connecting to a USB charger like your smart phone charger using the provided USB cable.



 The red circle shows the video/camera switch.

Instruction's

Camera/Video Mode

- 1. Turn on camera:** Ensure the video /camera switch is to the left (as your looking the pen, same as the above picture) Press the on/off button for 2 seconds, then the camera light will slowly flash **Orange**. When you take a photo the light will flash **Blue** to indicate you have taken a picture then go back to slowly flashing **Orange**.
- 2. Turn on Video:** Ensure the video /camera switch is to the right (as your looking the pen, same as the above picture) Press the on/off button for 2 seconds to turn the unit on, the light will be **Blue**. Press the button once to start the recording and

the **Orange** light will come on while you are recording. Press the button once more to stop the recording.

- 3. Connect to computer:** To connect to the PC to download files or watch recorded video you need to turn off the Pen prior to connecting to PC. It can then be connected to computer via the usb cable and port. The computer will show the drive letter of the Removable Disk; the video files will be saved in this directory.

Set the time

The camera offers the function of showing the time and date in the video files (when the video is complete) you can also reset the date or not show the date on the video files

- Turn off the camera, connect to the computer, open the Removable Disk of camera, open the Time file and change the date and time to today's date and time e.g., 2015-12-15 15:30:22 click on file and save.
- Ensure there are no spaces before the year and none after the seconds. Leave a space between the day & hour.

When the Pen Cam seems to malfunction, you can reset it. Use a thin needle (or toothpick) to press the Reset button inside the Reset hole (very gently). Restart the Pen Cam, this should fix any issues.

Caution:

Your Pen Cam is a high tech device and should be treated with care.

- The Pen Cam may become fairly hot during recording – this is normal. To ensure proper cooling do not block the flow of air to the cover of the Pen Cam.
- Keep the Pen Cam dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your Pen Cam does get wet, allow it to dry completely.
- Do not drop, or knock the Pen Cam. Rough handling can break internal circuit boards and fine mechanisms.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the Pen Cam.

Important:

All jurisdictions have specific laws and regulations relating to the use of cameras and voice recorders. Before using any camera and/or voice recorder for any purpose it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and voice recorders, and to comply with the applicable laws and regulations.