

2K 1296P Super HD 16GB Spy Camera Watch

Instruction Manual v2020.01

SKU: HAEWATCH2K



This 1296P 2K Spy Watch Hidden Camera with IR is super simple to operate and is part of our premium covert spy camera range with just a touch of a button for full 2K and audio recording, a great wearable hidden camera.

Features:

- Video, Photo and Audio Recording
- Continuous and Motion Detection Recording
- Discreet look makes it ideal for otherwise impossible recording opportunities
- One touch operation
- 2K High Definition color video allows you to clearly make out images
- Sleek and fashionable design
- Adjustable recording resolution
- Easy to use software to set date/time and adjust resolution
- Enable or Disable Timestamp

Charging the Battery:

Unscrew the USB Crown and insert the supplied USB cable then connect the other end to a DC 5V USB Power adapter.

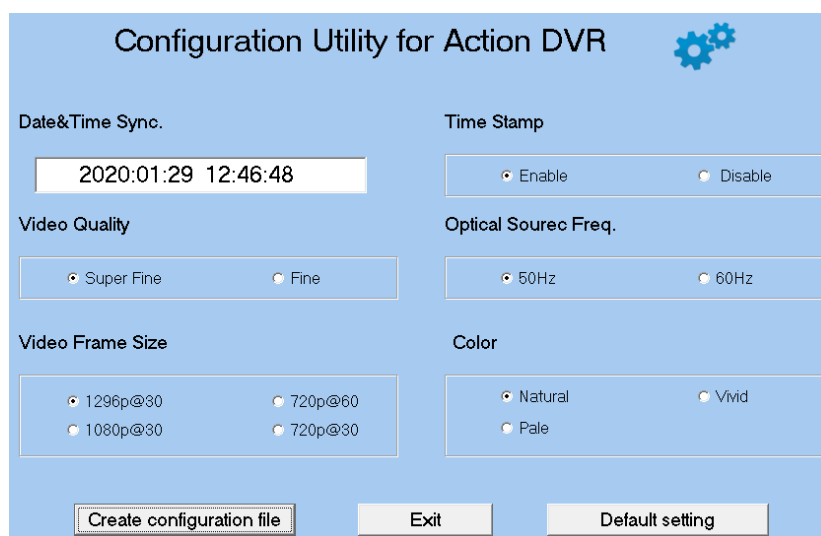
A blue LED will flash while the device is charging and turn solid blue once fully charged.

Prior to first use please ignore the LED indicator and charge uninterrupted for 4 hours.



Initial Setup:

Insert the USB cable into the USB Crown and the other end into a USB port on a personal computer or laptop. A new removable disk will appear on the screen. Open the removable disk and run the setup file. This will allow you to set the date and time stamp, frame size and video quality etc.

The screenshot shows a software window titled 'Configuration Utility for Action DVR' with a gear icon in the top right. The window is divided into several sections: 'Date&Time Sync.' with a text box showing '2020:01:29 12:46:48'; 'Time Stamp' with radio buttons for 'Enable' (selected) and 'Disable'; 'Video Quality' with radio buttons for 'Super Fine' (selected) and 'Fine'; 'Optical Source Freq.' with radio buttons for '50Hz' (selected) and '60Hz'; 'Video Frame Size' with four radio buttons: '1296p@30' (selected), '720p@60', '1080p@30', and '720p@30'; and 'Color' with radio buttons for 'Natural' (selected), 'Vivid', and 'Pale'. At the bottom are three buttons: 'Create configuration file', 'Exit', and 'Default setting'.

Apply changes, select “Create configuration file” and “Exit”.

Setting the Watch Time:

Pull out the Time Adjust Crown. Turn the crown to set the time. Push the crown back to the normal position once the time has been set.

Reset to Factory Defaults:

Should the device become unstable please try resetting the device to Factory defaults. Press both the “Reset” and “Function” buttons at the same time.

Playback Recordings:

Insert the USB cable into the USB Crown and the other end into a USB port on a personal computer or laptop. A new removable disk will appear on the screen. Open the removable disk and then select the Audio, Photo or Video Folder for the relevant recordings you wish to playback.

Operating Instructions:

1. Powering On/Off: Press and hold the Function Button.
2. Recording Video: Once the device is powered on a green LED will flash several times and start the video recording automatically. Push the Function Button to pause the recording. The LED will turn solid blue to indicate it is in Standby Mode. Pushing the Function Button again will start another recording. The green LED will flash several times and go out to indicate it is recording.
3. Taking Photographs: From Standby Mode (solid blue LED) press the Function Button twice. An alternating blue and green LED will flash. To take a photo click the Function Button once. A blue LED will flash twice each time a photo is taken. To exit the photograph mode, press the Function Button twice. You should now be in Standby Mode (solid blue LED)
4. Audio Only Recording: From Standby Mode (solid blue LED) press the Function Button three times quickly. The blue LED will flash several times and go out. Audio is now being recorded. To exit the audio mode, press the Function Button once. You should now be in Standby Mode (solid blue LED)
5. Motion Detection Mode: From Standby Mode (solid blue LED) press the Function Button four times quickly. The green LED will flash. Video recording will start when motion is detected, and the green LED will flash faster. To pause press the Function Button once. A green solid LED will be displayed. Press the Function Button again to restart Motion Detection. To exit Motion Detection mode, press the Function Button four times quickly. You should now be in Standby Mode (solid blue LED)

Additional Notes:

- When the battery is too low the blue LED will flash several times and power off.
- When the memory is full the oldest recordings will be over written (depending on the recording mode).
- When the memory is full and cannot be automatically be overwritten both the blue and green LED will flash several times and power off.
- If the device has been left in standby mode for 2 minutes the device will automatically power off.

Important Notice: All jurisdictions have specific laws and regulations relating to the use of cameras and voice recorders. Before using any camera and/or voice recorder for any purpose it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and voice recorders, and to comply with the applicable laws and regulations.