


HD 1080P Wireless Security Wi-Fi Camera

User Manual
Version: Sep, 2019

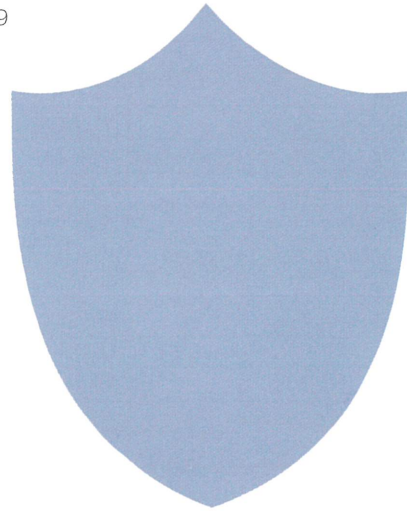

Size: 100x60x23mm



Power Bank

Overview:

The wireless Wi-Fi security camera comes with HD 1080P high resolution camera for live video streaming worldwide from anywhere by smartphone APP TinyCam;

It is a functional power bank with two output USB port for charging. It also equipped with invisible night vision leds for day and night working around 4 meters.


Usages: Nanny camera, Home/ Shop/ Office/ Warehouse surveillance camera.....

Warning : " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:

- 1 x Camera Unit
- 1 x 5V2A Power Adapter
- 1x USB Cable
- 1 x User Manual
- 1 x Card reader

Product structure of Power Bank

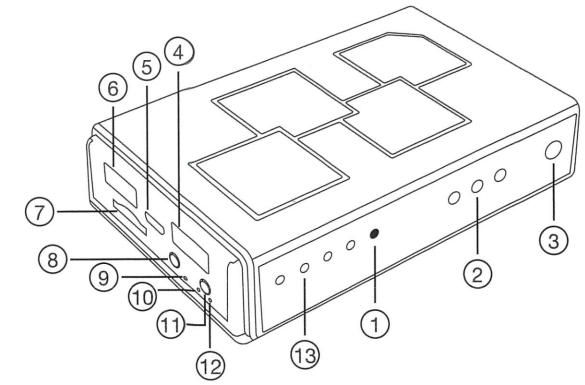

- ① Camera
- ② Night vision leds
- ③ Light sensor
- ④ Output USB port-1
- ⑤ Input USB port
- ⑥ Output USB port-2
- ⑦ Micro SD card slot
- ⑧ ON/OFF Key
- ⑨ Power indicator
- ⑩ Wi-Fi indicator
- ⑪ Reset Key
- ⑫ Charging indicator
- ⑬ Battery indicator

Wi-Fi Camera Connection Setting


Step1: Download and install APP

Scan below QR code or search and download free APP named <TinyCam> in Apple APP store, Google play or Electronic market, and install it;

Tips: Please allow "TinyCam" to access your location while you are using the app.



3

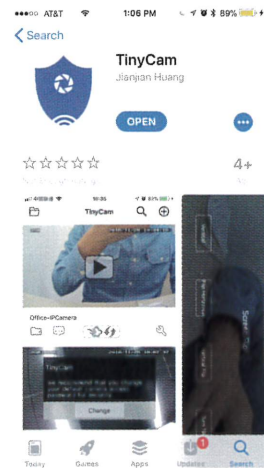


Step 2: Take off back cover --> Insert micro SD card --> Press back ON/OFF switch for 2 seconds ; wait for 1 minute (Power indicator and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug power adapter for long time use.

4


Step 3:Connect Wi-Fi

1.Open smartphone settings, search and connect the device's wireless signal named"HCAM.....",wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.

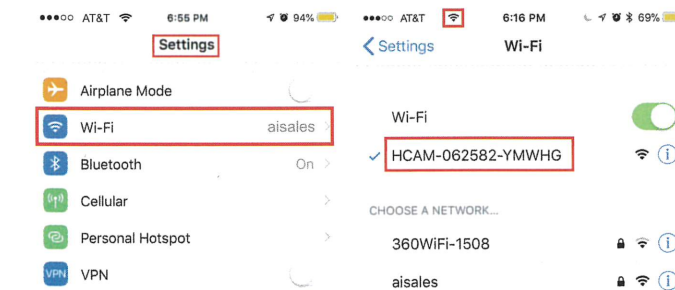

5


2. Enter APP, press right corner "Q" icon --> LAN search device --> Press Add --> Camera Online then;

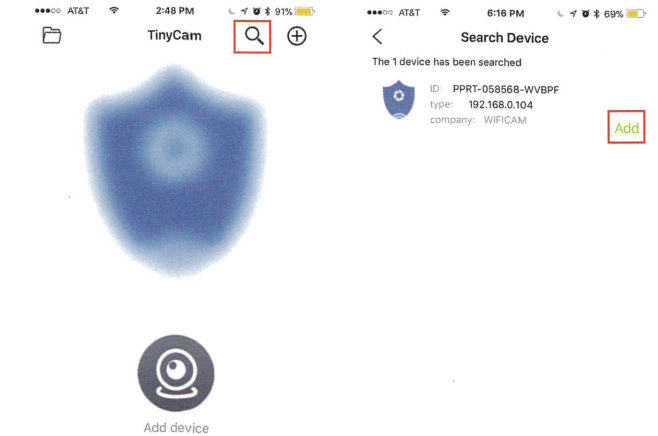


Tips: 1.Please select **【Change】** to change device password for security **【default: 888888】** ;
2.This step = P2P mode, can check video locally when without Wi-Fi.

6

3.Press icon on the right corner of camera --> WiFi Config -->Select local Wi-Fi (SSID) --> Input password --> Press Confirm;

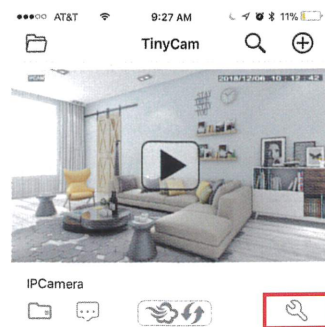

7

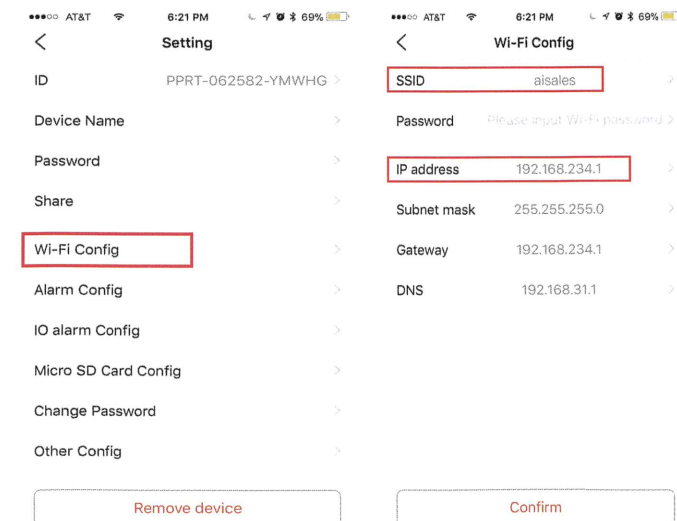


4.Quit APP , wait 30 seconds (device restart automatically)and connected with set Wi-Fi(Wi-Fi indicator flash regularly) ;
5.Enter APP and check live video locally or remotely anywhere.

8


Set camera name and private code

Set name:Press the icon after the camera, select Device name --> Input needed name or select sample names like Office...
Set new password: Press the icon after the camera, select Change Password --> Old password = 888888.

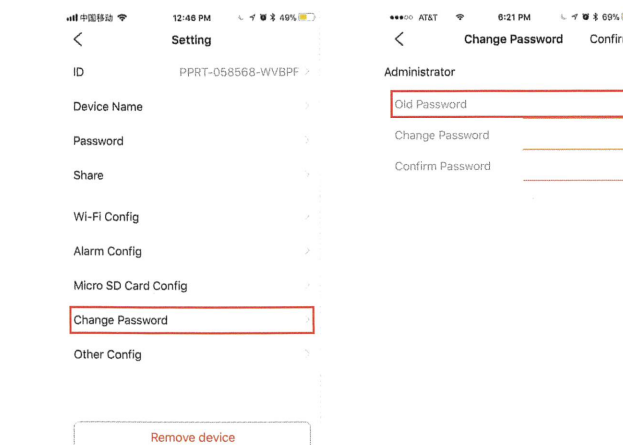


9

APP introduction:

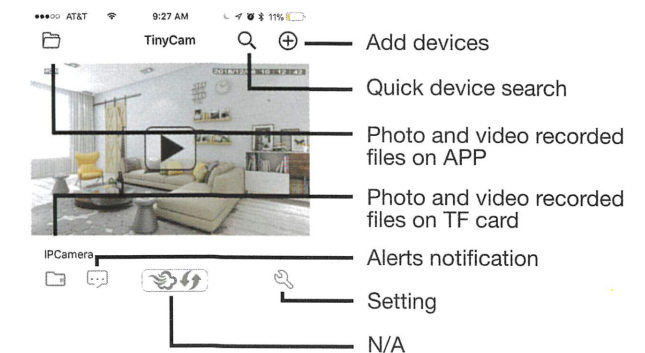


Tips: 1. Please confirm phone setting has allowed TinyCam App to access the location services;
2. A TF card(Micro SD card) must be inserted for saving alerts pictures.

10

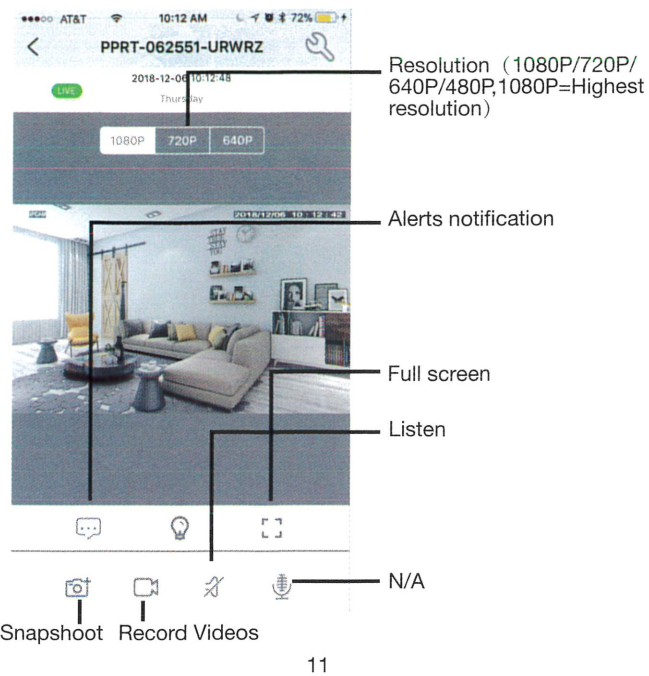

11

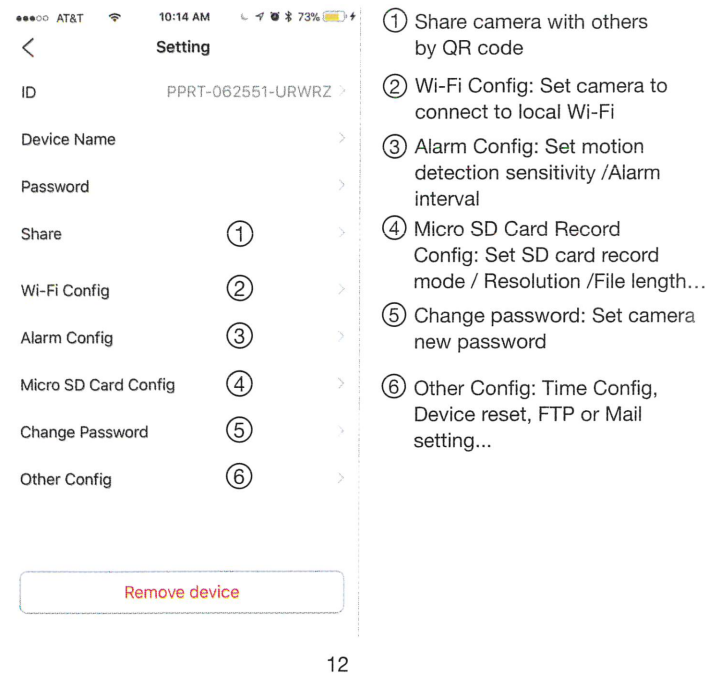

12

Watch by PC in LAN network

Once camera connected well with Wi-Fi, press the after the camera, Wi-Fi Config --> find out IP address --> Input this IP address info into browser.
User name: admin Password: your set password (default 888888)

Watch by PC remotely (WAN)

Once camera connected well with Wi-Fi, download PC driver from below QR code.
Input UID, User name: admin Password: your set password (default 888888) for checking live streaming video remotely.



[[Download CD Driver](#)]

13

Specification

Resolution	1 Mega CMOS
Video pixel in phone	Max 1920*1080
Video pixel in card	1080*720
Frames	Max 25fps
Compressed format	H.264
View angle	120 Degree
Type of memory card	TF card>=Class 4/10 and HC marked
Maximum capacity of memory card	128GB
PC operation system	Windows 7, 8 / Mac OS X
Play software	VLCPlayer/SMPlayer
Mobile phone operation system	Android/iOS
Web browser	IE7 and above, chrome, firefox
Power consumption	300MA/3.7V
Battery Capacity	Rechargeable 5000 mA
Recording	1 minute/ around 20MB
Working time in day time	Around 8 hours
Working time in night time	Around 3 hours
Charging time	3-4 hours
Power adapter	5V / 2A

14


FAQ

- Q: Can't get device Wi-Fi signal?
A: Press reset key for 10 seconds and wait 1 minute.
- Q: Live video not smooth and clear?
A: Select suitable resolution according to the real time network environment.
- Q: Motion detect set and alarm?
A: 1). Set motion detect sensitivity in Alarm Config, and press right corner Confirm to save the setting;
2). When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 11 - Alert notification]. **(A micro sd card MUST be inserted for saving alarm pictures)**

15

- Q: Micro SD card instruction?
A: 1). Format card before inserting;
2). When backside switch is on, every time you insert micro SD card, it will record automatically;
3). Once connected, can set SD management in app [Micro SD Card Record Config].
4). If Micro SD card detected and recording, the Wi-Fi indicator will flash slowly.
- Q: How to play micro SD card video?
A: 1). Use a card reader to read and play;
2). Use APP to play back [Page 10 - TF card recorded files];
3). Play back in good speed network.
- Q: Forget camera password, or item goes abnormal?
A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
- Q: Any operation video demo of the camera for setting up?
A: Please contact local dealer for video guide.

16

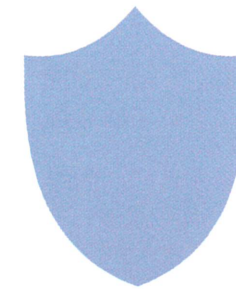

The end!