

HDKEYCAMX10

User's Manual

Features:

The HD keyring camera is a covert device that takes 1080P recordings and stores them to a micro SD card



Turning on your keycam

Hold the On/Off button until the device vibrates

Recording with your key cam

Turn the device on, and press the On/Off button once to begin recording a video, to stop simply press the button again once

Turning Nightvision on / off

Hold the IR On/Off button until you feel the device vibrate

Setting Motion Detection

Turn the device on, and then press the start / stop button 3 times.

The device will now have a solid blue light and a flashing red light. Device is now in motion detection mode.

To stop simply press the Stop / Start button once.

Charging:

Find the USB cable and the charger that was provided with the device, insert one end of the connecting cable to the "Charge" hole of the device and put the other end to a free PC usb port.

When charging, the red light and blue light on the chargers are on. When fully charged, the red light comes on and blue goes out.

(Give at least 3-5 hours for charging time).

Downloading your recordings

Simply plug your device in via the provided USB cable to a windows or Mac PC

You will then be able to access the memory as a removable disk !



HDKEYCAMX10 Led Code Meaning Table

Mode	Button	Red Led	Blue Led	Yellow Led
Unit Off	Press Unlock for 3 sec to turn off	OFF	OFF	OFF
Unit On	Press Unlock for 3 sec to turn on On startup the unit will check for SD card, if OK, it will go into Mode 1 state (see below)			
Mode Selection	To move between modes press the Lock button			
Mode 1, Video Recording - Standby		ON	OFF	ON=IR ON OFF=IR OFF
Mode 1, Video Recording - Active	Press Unlock to turn start/stop	Flashing	OFF	ON=IR ON OFF=IR OFF
Mode 2, Photo Mode - Standby		OFF	ON	ON=IR ON OFF=IR OFF
Mode 2, Photo Mode - Active	Press Unlock to take a photo. Blue light flashes and returns to standby	OFF	Flashes	ON=IR ON OFF=IR OFF
Mode 3, Audio Recording - Standby		ON	ON	n/a
Mode 3, Audio Recording - Active	Press Unlock to turn start/stop	Flashing	ON	n/a
Mode 4, Motion Detection - Standby		Flashing	ON	ON=IR ON OFF=IR OFF
Mode 4, Motion Detection - Active	Press Unlock to turn start/stop. Note once motion is activated, it does not stop, it continues unless manually stopped, card is full or runs out of battery	Flashing	Flashing	ON=IR ON OFF=IR OFF

Setting up the time

First create a text file named `TIMERSET.txt`

Then add the current date and time the format is year, month, day, 24hour, minute, seconds with no spaces or slashes.

Then add a Y after a space at the end.

So if the date is 26th October 2015 at 3.30pm and 45 seconds your file should have.

```
20151026153045 Y
```

Copy the `TIMERSET.txt` file onto the SD card for your device and your device should now have correct time and date stamp.

